

# Operating and Maintenance Manual



We Know Compaction



**CR 5 Y**  
**CR 5 Y E**

0116267  
0116266

Attached to the machine is a rating plate. Note down the information given on this plate so that you can recreate the rating plate should the plate be lost.



### 1 Description

.....

### 2 Type

.....

### 3 Serial number

.....

### 4 Year of construction

.....

### 5 Mass [kg]

.....

### 6 Rated power [kW]

.....

# Contents

<b>1. Introduction.....</b>	<b>4</b>
<b>2. Description.....</b>	<b>5</b>
<b>3. Technical data.....</b>	<b>6</b>
<b>4. Safety.....</b>	<b>7</b>
4.1. Information and safety stickers .....	12
<b>5. Operation.....</b>	<b>13</b>
<b>6. Transport.....</b>	<b>19</b>
<b>7. Storage .....</b>	<b>20</b>
<b>8. Maintenance.....</b>	<b>21</b>
<b>8.1. Maintenance overview .....</b>	<b>22</b>
<b>8.2. Description of the maintenance operations.....</b>	<b>23</b>
8.2.1. Clean the air filter .....	23
8.2.2. Check V-belt.....	23
8.2.3. Check the engine oil level .....	24
8.2.4. Change the engine oil .....	25
8.2.5. Change the engine oil filter .....	26
8.2.6. Change the fuel filter .....	26
8.2.7. Check the hydraulic oil level .....	27
8.2.8. Change the oil in the exciter .....	27
8.2.9. Use a permanent charger .....	27
<b>8.3. Operating fluids and fill levels .....</b>	<b>28</b>

# 1. Introduction

This operating and maintenance manual is designed to help you become familiar with your soil compactor and enable you to maintain it and use it for its intended purpose.

The safety and maintenance instructions provided in this manual will help avoid hazards, reduce repair and downtime costs and will increase the reliability and operational readiness of your machine. Follow these instructions precisely.


This operating and maintenance manual must always be kept at the implementation site of the machine and be available to the machine operator.

Turn to your Weber MT dealer if you require any additional information.

Found on the last page of this manual is a QR code. Scan it to acquire the current contact addresses of all Weber MT branches.

You can obtain information on the assembled Yanmar diesel engine and the associated operating and maintenance manual as well as the spare parts list from Weber MT.

For the latest spare parts list of the machine, open the WeberMT service app or visit the following link:

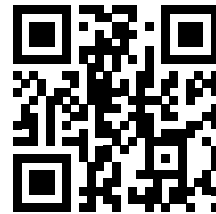

<https://wenet.webermt.com/>

## 2. Description

### **The machine**

The machine is a hand-guided, reversible soil compactor. The machine is composed of a bottom and a top section. The bottom section houses the exciter, while the top section contains the engine and the required controls.

An air-cooled Yanmar diesel engine makes the exciter vibrate via a centrifugal clutch. The generated force is transmitted between top and bottom section via a V-belt.

The engine speed is adjusted between idle speed and full-throttle speed via a gas lever.

A handle is used to control forward and reverse travel via an infinitely variable hydraulic shifting mechanism.

### 3. Technical data

	CR 5 Y	CR 5 Y E
<b>Weight</b>		
Operating weight CECE [kg]	286	301
<b>Dimensions</b>		
Overall length [mm]	1545	1545
Overall width/with attachment plates [mm]	430/550/700	430/550/700
Height with folded guide bar [mm]	1065	1065
Base plate length [base in mm]	250	250
Pressure surface [mm]	250x430-250x700	250x430-250x700
<b>Drive</b>		
Engine manufacturer	Yanmar	Yanmar
Type	L70V	L70V
Performance at operating speed in accordance with ISO 3046-1 [kW]	4,6	4,6
Combustion process	4-stroke diesel	4-stroke diesel
Operating speed [1/min]	3450	3450
Operating speed [soil-dependent, m/min]	0-25	0-25
Incline capacity [soil-dependent, %]	35	35
<b>Vibration</b>		
System	Two-shaft vibrator	Two-shaft vibrator
Drive concept	mechanical	mechanical
Frequency [Hz]	77	77
Centrifugal force [kN]	42	42
<b>Noise emissions in accordance with 2000/14/EC</b>		
Sound pressure level LPA ascertained in accordance with EN 500, [dB (A)]	98	98
Sound power level LWA ascertained in accordance with EN ISO 3744 and EN 500, [dB (A)]	108	108
<b>Vibration values</b>		
Root-mean-square acceleration value for hand-arm vibration ascertained in accordance with EN 500, [m/s <sup>2</sup> ] In accordance with directive 2006/24/EC, complying with the vibration values is the owner's responsibility	2.4	2.4

## 4. Safety

### General

All safety instructions must be read and complied with, as non-compliance will result in

- danger to life and limb of the user,
- impairments to the machine or other property.

In addition to the operating manual, the accident-prevention regulations in the country where the appliance is used must be complied with.

### Intended use

The machine should only be used in technically faultless condition, as intended, in a safety-conscious and hazard-conscious manner, and in compliance with the instructions in the operating manual.

Malfunctions that may impair safety require that you stop working with the machine immediately. These types of damage must be reported and corrected without delay.

The machine is designed exclusively for compacting:

- sand,
- gravel,
- crushed rock,
- low-cohesive mixed material,
- paved surfaces.

The operator's work position is behind the machine.

The operator must guide the machine safely with both hands on the handle.

### Non-intended use

Unless used as intended, the machine involves a risk of personal injury and property damage. The machine is expressly not suitable for:

- compacting frozen subsurfaces,
- compacting hard soils that cannot be compacted further,
- compacting non-bearing material,
- compacting highly cohesive soils,
- compacting (ramming) that exerts point loads on the base plate,
- crushing and compacting individual rocks.

The responsibility for any damage arising from non-intended use falls on the owner / operator.

Non-intended use or misuse will void all liability and warranty claims.

### Residual risk

There is always an increased risk of accidents in the immediate danger area around the machine if the operator fails to notice persons in the vicinity of the machine.

Make anyone close to the machine aware of this risk. The operator must not put the machine into operation unless everyone in the vicinity of the machine is aware of this risk.

<b>Requirements on the operator</b>	<p>This soil compactor may only be operated by suitable operators who are 18 years or older. They must be instructed on how to operate the machine by the owner or by the owner's assigned personnel. The operator must comply with traffic regulations.</p> <p>The machine must not be operated by children.</p>
<b>Personal protective equipment</b>	<p>Personal protective equipment consisting of</p> <ul style="list-style-type: none"> <li>- hard hat,</li> <li>- hearing protection,</li> <li>- protective gloves,</li> <li>- work shoes or boots with toe guard</li> </ul> <p>must be worn during operation and the execution of maintenance on the machine.</p>
<b>Danger areas</b>	<p>The immediate danger area is the direct perimeter around the machine. This area is off-limits to third parties.</p>
<b>Spare parts, changes and conversions</b>	<p>Changes and conversions are prohibited unless made with original Weber MT spare parts. If the machine is modified with other accessories without the approval of Weber MT, the manufacturer will not assume liability for any resulting personal injury or property damage.</p> <p>All maintenance and repairs must be carried out with original Weber MT spare parts. Untested spare parts may affect the reliability and safety of the machine.</p>
<b>Before starting the machine</b>	<p>There is danger of material damage if the machine is started before necessary maintenance or repairs have been completed. Make sure every time before starting the machine that all work on the machine has been completed.</p> <p>To avoid injuries, the machine must not be started unless the operator wears the required personal protective equipment.</p> <p>Objects placed on top of the machine may fall or be flung off during operation or when the machine is started. Therefore, remove all loose objects or tools before starting the machine.</p> <p>If the gas cap is open, fuel may escape and ignite on the engine when the machine is started or while it is operating. There is a risk of burns. Therefore, do not start the machine unless the gas cap is closed.</p>



## **Start-up procedure**

Do not disperse any sprays or other agents into the air intake while the machine is starting up. They may lead to overheating in the combustion chamber and result in damage to the engine.

There is danger of suffocation if the operator starts up the machine in closed rooms or in deep and tight trenches. Operating the machine in closed rooms is prohibited. Provide for an adequate supply of air before starting the machine.

To prevent damage to the engine, one start-up procedure must not take longer than 15 seconds. If the engine does not start after the maximum of 15 seconds, turn the ignition key back to position "0" and allow the starter to cool off for 2 minutes.

If the ignition key fails to spring back to position "1" automatically, the electric starter and the engine may sustain damage. Abort the start-up procedure and shut down the machine. Determine and correct the cause prior to the next start-up procedure.

## **During operation**

Monitor the surroundings to avoid injury to third parties or material damage.

Suspend operation and shut down the machine if detecting damage on the machine during operation.

Suspend operation and shut down the machine if the light indicators of the start module do not go out shortly before start-up or come on during operation.

## **Parking the machine**

Always park the machine on a level subsurface with sufficient bearing capacity.

Parked machines presenting an obstacle must be secured in accordance with statutory regulations, particularly in the area of public traffic surfaces.

Engine and exhaust heat up during operation and can cause burns on contact. Therefore, do not touch these components during operation or shortly after the machine was switched off.

## **Fueling the machine**

Spilled fuel may ignite and has a negative impact on the environment. Therefore, wipe up spilled fuel and make sure the gas cap is firmly tightened after fueling.

When coming into contact with fuels, the rubber-bonded metal buffers of the machine may become damaged or ineffective. Therefore, wipe spilled fuel carefully off the rubber-bonded metal buffers.

Fuel vapors are easily flammable. Do not smoke and keep away from open fire while refueling the machine. The machine must not be fueled unless the engine is switched off.

### **Cleaning work**

Use clear water for cleaning. Do not use flammable solvents. The vapors of the solvents may ignite upon contact with hot components or other sparks.

Perform cleaning tasks only in rooms that are suitable and have been approved for that purpose. Residual oil and lubricants that may have been rinsed off have a negative impact on the environment and must be collected by suitable means (e.g. oil separator).

### **Safe handling of combustion engines**





Combustion engines pose a particular risk during operation. Their exhaust emissions contain carbon monoxide, a colorless and odorless gas that is extremely hazardous, which, if inhaled even briefly, can cause unconsciousness and death. Therefore, never inhale the exhaust gas.

### **Inspection**

The machine must be inspected in accordance with the corresponding implementation conditions and operating conditions to ensure its operationally safe status. This inspection should be performed as needed by an expert - however, no less than once a year. The findings of the inspection must be stored in writing until the time of the next inspection.

## Safety instructions and warnings





A variety of safety instructions and warnings are used throughout this operating manual.  
The following explains the meaning of signal words and symbols.

 <b>ATTENTION</b>	ATTENTION warns of the danger of material damage.
 <b>CAUTION</b>	CAUTION warns of the danger of slight injury.
 <b>WARNING</b>	WARNING warns of a danger that may lead to death or serious injury.
 <b>DANGER</b>	DANGER warns of a danger that will lead to death or serious injury unless avoided.



The information symbol provides supplemental information on the operation of the machine and points to complementary technical information.

#### 4.1. Information and safety stickers

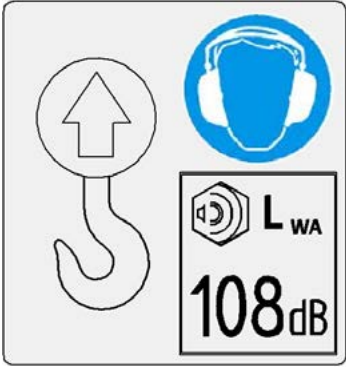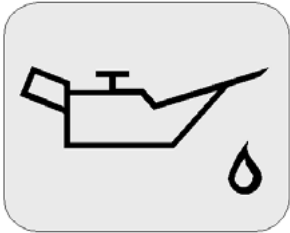
	Sticker	Meaning
1		All threaded unions must be checked for firm seat on a regular basis and, particularly, after initial use.
2		The fuel tank may only be fueled with diesel.
3		Use the designated lifting ring to lift the machine. Sound power level 108 dB (A), Wear ear protection.
4		This indicator warns of insufficient oil pressure. Shut down the machine immediately when this indicator comes on.

## 5. Operation

### **Preparing the machine for initial use**

- ▶ Remove all packaging material.
- ▶ Check all components for visible damage. Do not start the machine if detecting visible damage. Contact the responsible dealer.
- ▶ Check if the shipment of the machine and its components is complete.
- ▶ Check the fill level of the operating fluids and top off if necessary.
- ▶ Set up the machine at its place of use.

## Operating positions on the machine

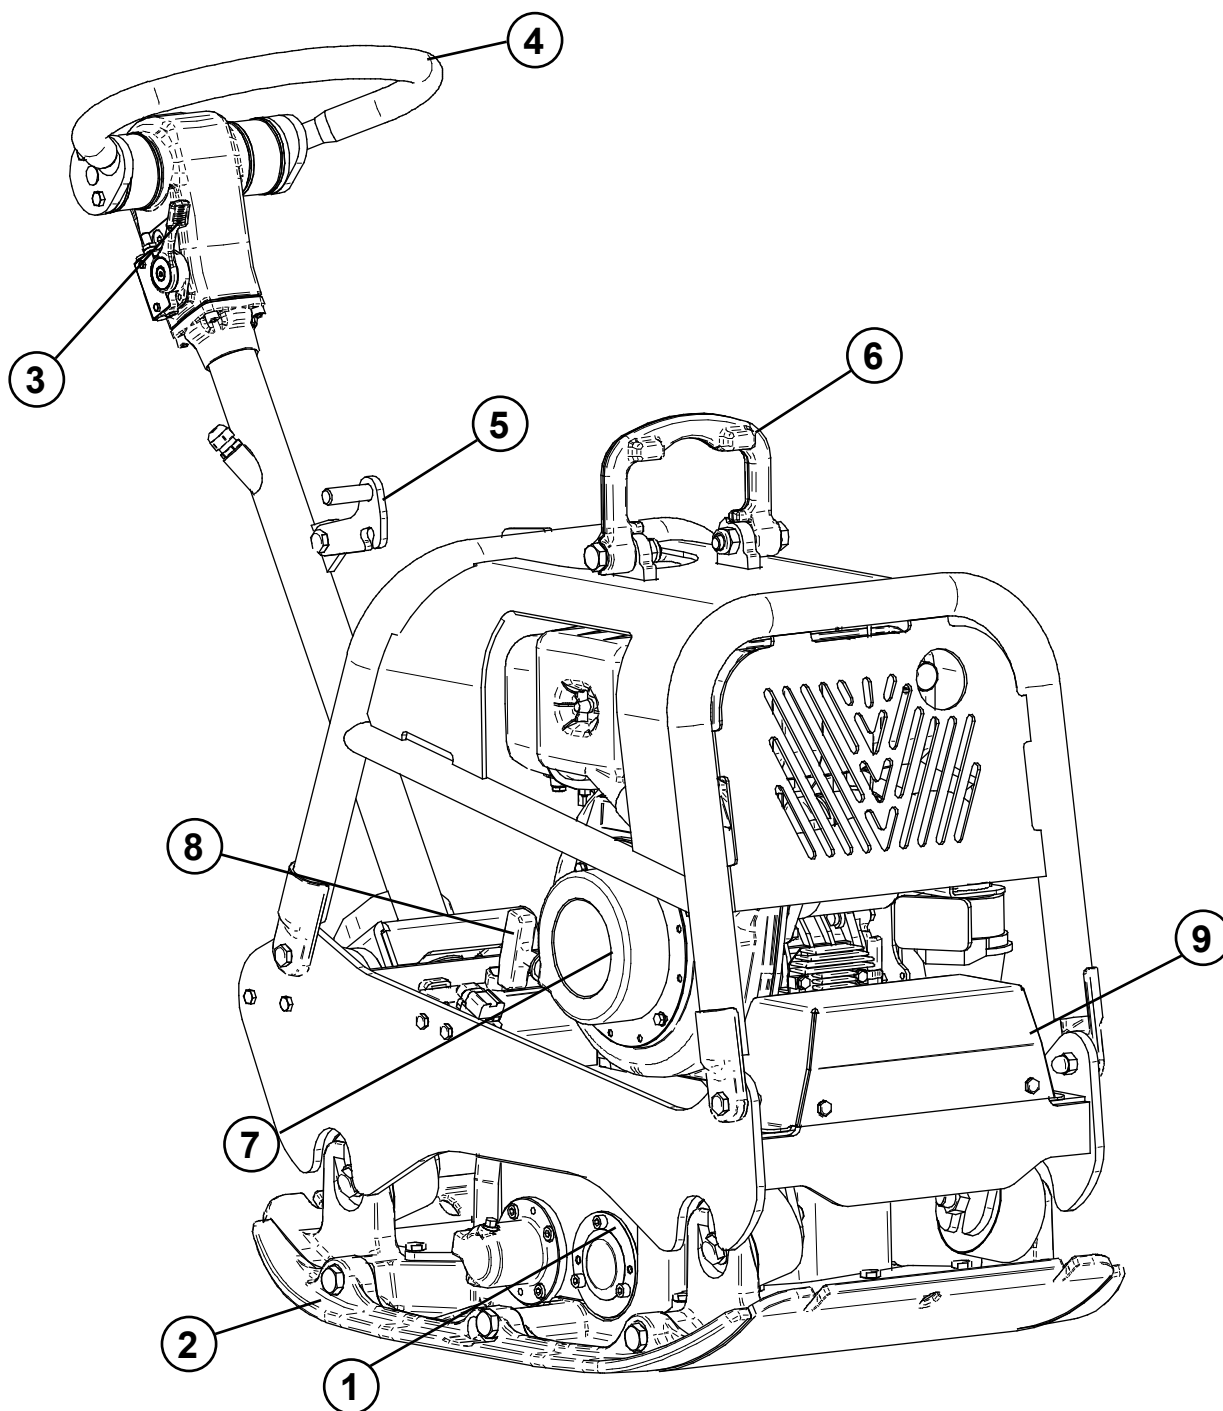


### Overall view CR 5 Y

- 1 Base plate with exciter
- 2 Mounting bracket
- 3 Gas lever
- 4 Handle
- 5 Lock for the guide bar


- 6 Lifting ring
- 7 Engine
- 8 Reversing starter
- 9\* Battery cover

\* only CR 5 Y E

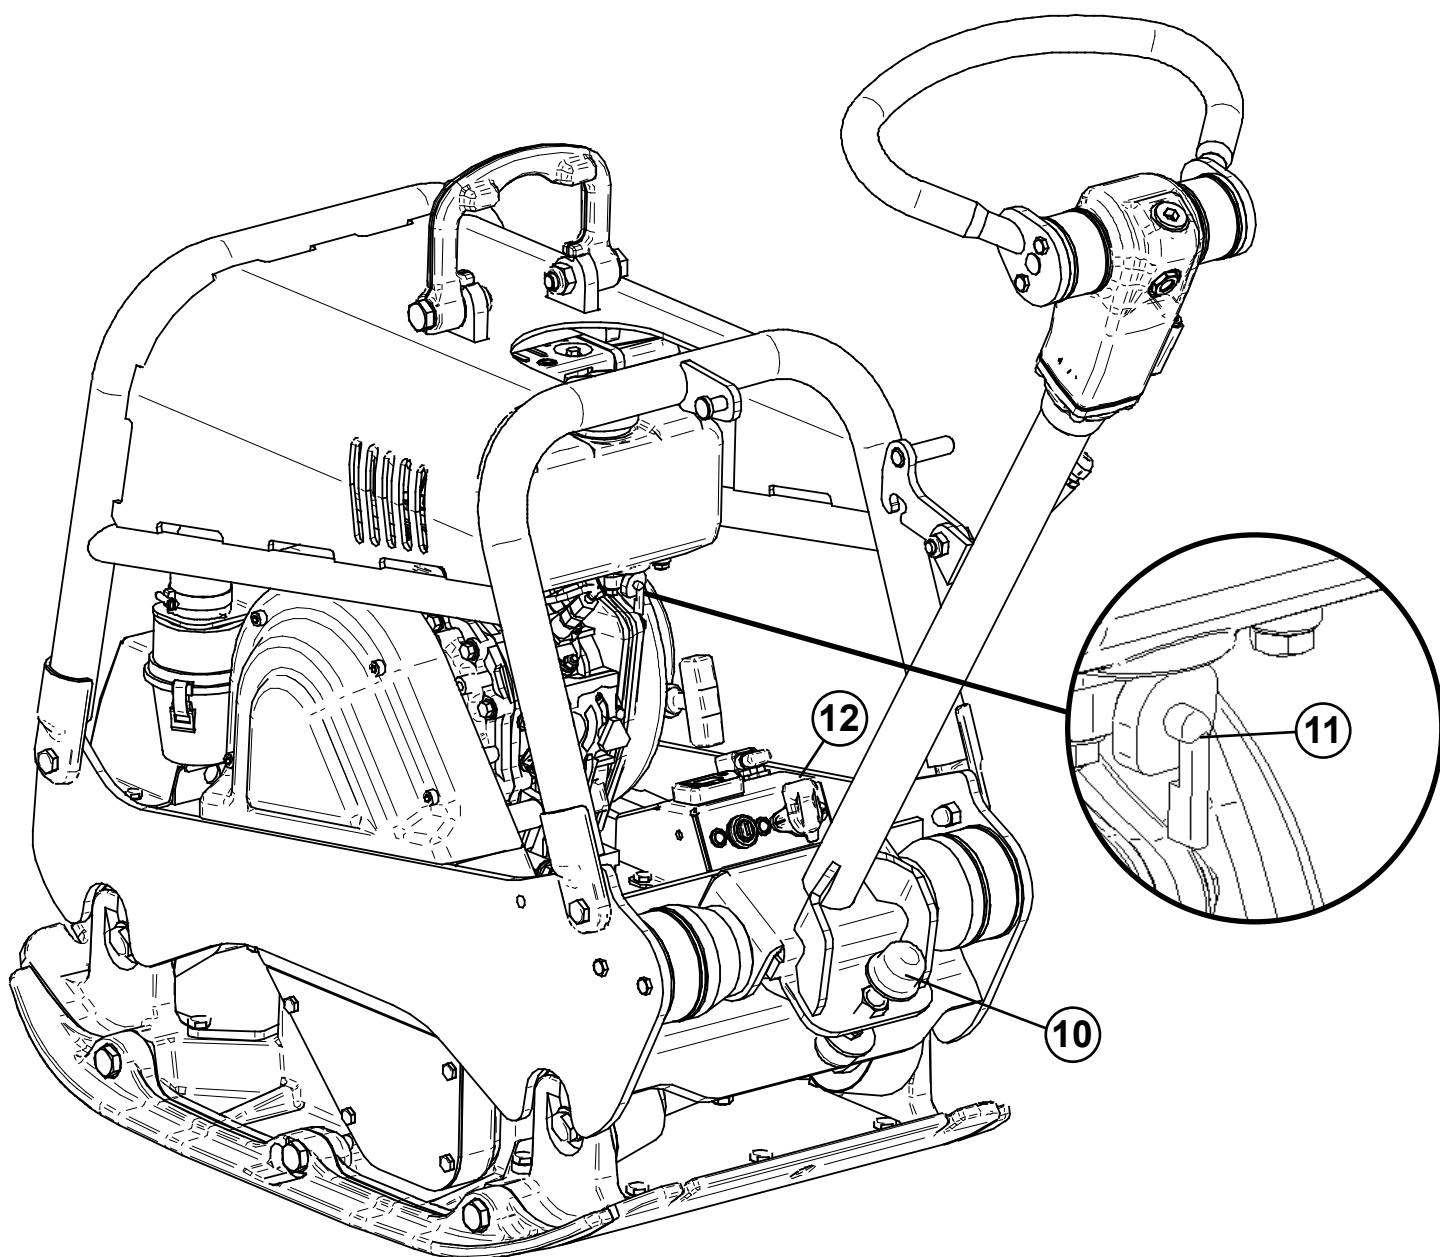

- 10 Set screw for height adjustment
- 11 Fuel cock
- 12\* Valve box

## The valve box (only CR 5 Y E)

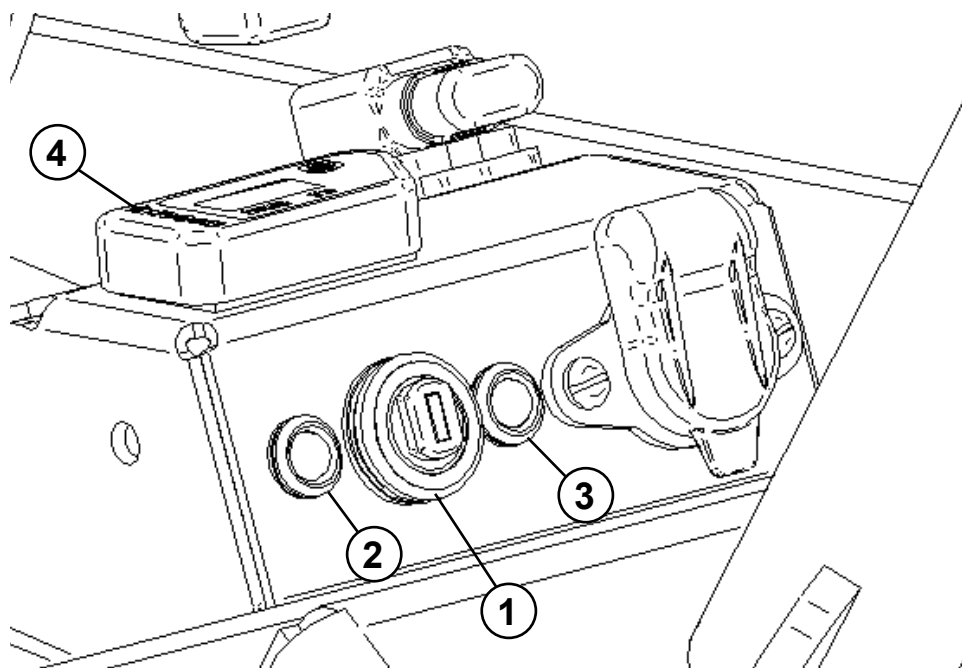

### 1 Key switch

The key switch is used to switch the power supply (ignition) to the machine on or off. It also actuates the electric starter of the engine.

- ▶ Switch in position "1"  
✓ The ignition is switched on.
- ▶ Switch in position "0"  
✓ The ignition is switched off.
- ▶ Switch in position "2"  
✓ The electric starter is actuated.

#### **ATTENTION**

Danger of material damage from running electric starter. The ignition key must spring back from position "2" to position "1" automatically. Otherwise:

- ▶ Shut down the machine immediately.

### 2 Oil pressure indicator (LED)

This indicator warns of insufficient oil pressure. Shut down the machine immediately when this indicator comes on.

### 3 Charge level indicator (LED)

This indicator comes on if the charging current supply to the starter battery is insufficient. While operation of the machine can resume, the cause of the insufficient charging current supply must be identified and rectified.

### 4 Operating hours counter

Indicates the operating hours completed by the machine.



## **Before starting work**

Perform the following tasks before starting to work in order to prevent failures or excessive wear.

### **Visual inspections**

- ▶ Hydraulic line for leaks
- ▶ Fuel system for leaks
- ▶ Rubber buffers for crack formation
- ▶ Other damage

### **Check and, if necessary, correct the fill levels**

- ▶ Engine oil
- ▶ Hydraulic oil
- ▶ Fuel

### **Other inspections**

- ▶ Check all threaded unions for firm seat
- ▶ Verify compliance with the maintenance schedule

## Working with the machine

### Starting the engine

#### ATTENTION

Risk of engine damage. The use of starter spray may lead to overheating in the combustion chamber.

- ▶ Do not use any starter spray.

#### WARNING

Danger of suffocation from engine exhausts when starting the engine in closed rooms or poorly ventilated work areas.

- ▶ Start the engine only in well-ventilated environments.
- ▶ See section “Safety” for operating the machine in trenches.

### Manual start

- ▶ Adjust the desired work height of the guide bar with the set screw (1).
- ▶ Open the fuel cock.
- ▶ Bring the gas lever into the full-throttle position.
- ▶ Return the key switch to position “1”.
- ▶ Slowly pull the handle of the reversing starter until resistance (the compression of the engine) is noticeable.
- ▶ Allow the handle to glide back into the initial position.
- ▶ Pull the handle through quickly, forcefully and completely.
- ▶ Repeat the process if the engine does not start.
- ✓ The charge level indicator and the oil pressure indicator go out.
- ▶ Set the gas lever to idle speed.
- ▶ Allow the engine to warm up for a few minutes.
- ✓ The machine is ready for operation.

### E-start

#### ATTENTION

Risk of engine damage if start-up procedures take too long. One start-up procedure must not be longer than 15 seconds. If the engine does not start, turn the ignition key back to position “0” and allow the starter to cool off for 2 minutes.


- ▶ Adjust the desired work height of the guide bar with the set screw.
- ▶ Open the fuel cock.
- ▶ Bring the gas lever into the full-throttle position.
- ▶ Turn the ignition key to position “2” and hold it until the engine turns over.
- ▶ Release the ignition key as soon as the engine is running.  
ATTENTION! Danger of material damage from running electric starter.  
The ignition key must spring back to position “1” automatically. Otherwise, shut down the machine immediately.
- ✓ The charge level indicator and the oil pressure indicator go out.
- ▶ Set the gas lever to idle speed.
- ▶ Allow the engine to warm up for a few minutes.
- ✓ The machine is ready for operation.

## Compacting

### **⚠ CAUTION**

There is a crushing hazard between the machine and the wall during work in close proximity to walls.

- ▶ Use extra caution when working close to obstacles

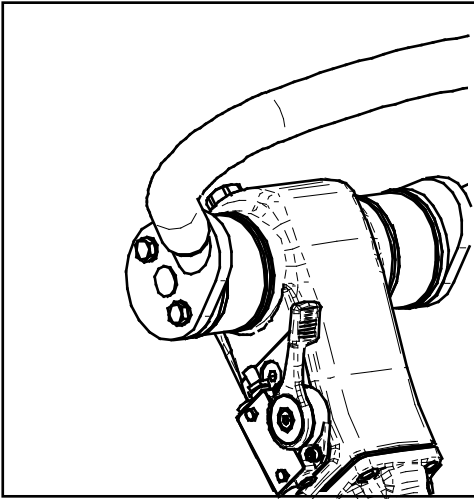

### **⚠ CAUTION**

Risk of injury if the machine is guided improperly.

- ▶ Guide the machine safely with both hands on the handle.

### **ATTENTION**

Danger of material damage or excessive wear if V-belt slips through.

- ▶ Operate the machine only in full-throttle mode.

- ▶ Start the engine.
- ▶ Bring the gas lever into the full-throttle position.
- ▶ Switch between forward and reverse travel by setting the handle to the corresponding direction.



The forward and reverse travel of the machine is infinitely variable.  
The speed of the machine is selected with the corresponding deflection of the handle

## Switching off the engine

- ▶ Pull up the gas lever beyond the idle position.
- ✓ The engine switches off.
- ▶ Close the fuel cock.
- ▶ Turn the ignition key to the "0" position and pull it out.

## 6. Transport

### Lifting the machine

The machine can be lifted for loading onto a vehicle.

### **⚠ CAUTION**

Risk of material damage and injuries. The use of defective or unsuitable lifting gear may cause the machine to fall down.

- ▶ Use slings that possess the appropriate carrying capacity.
- ▶ Lock the guide bar in place in the folded position.
- ▶ Fit the crane hook into the lifting ring and lift the machine up straight.

## 7. Storage

### Storage at the construction site

If stored at the construction site, e.g. over night, the machine must be secured against theft and unauthorized use.

Parked machines presenting an obstacle must be secured in accordance with statutory regulations, particularly in the area of public traffic surfaces.

### Storage for an extended period

If the machine will not be used for a period longer than one month, the following measures must be taken:

- ▶ Clean the entire machine thoroughly.
- ▶ Check the entire machine for leaks. Correct any detected defects.
- ▶ Empty fuel and fill the tank with clean fuel.
- ▶ Check and, if necessary, correct the engine oil level.
- ▶ Check and clean air and fuel filter. Replace if damaged.
- ▶ Lightly oil all bare parts, levers and accelerator control cables.
- ▶ Check the charging status of the battery, recharge if necessary.
- ▶ Check the charging status of the battery on a regular basis, but not less than every 3 months. Another option is to use a permanent charger / battery maintainer.



If the machine is to be stored for longer than six months, contact the Weber MT's service organization to discuss additional measures.

## 8. Maintenance

### General information

The section below contains instructions that need to be observed for regular maintenance. Read these instructions carefully and follow them in order to prevent downtimes of the machine caused by excessive wear or damage to the machine. Also read the safety instructions relevant to machine maintenance before you begin with the maintenance work. They help minimize the risk to maintenance personnel.

### Maintenance personnel

Maintenance and repairs require specific qualifications. These operations may only be carried out by trained professionals. Maintenance personnel must be instructed on how to operate the machine by the owner or by the owner's assigned personnel.

Maintenance personnel are required to wear the personal protective equipment during work (see section "Safety").

### Safety

There is an increased risk of injury during maintenance and repairs, e.g. crushing at moving parts.

Following the conclusion of all maintenance and repairs, all protective fixtures must be refitted and placed back into operation.

Discharged operating fluids have a negative impact on the environment. They must be collected and stored in suitable containers. Disposal in accordance with environmental protection regulations.

All maintenance work may only be carried out when the engine is switched off. Safeguard the engine against unauthorized start attempts.

Before working on the electrical system, disconnect the starter battery and cover the battery terminals with insulating material. It is also recommended to disconnect the battery as a means to safeguard the machine against unauthorized start attempts during maintenance work.

Before starting the machine after maintenance operations, make sure that all loose parts (screws, tool, etc.) have been removed from the machine. They can be drawn in or flung off by moving parts.

Keep the entire machine clean. The stickers must always be clearly legible. Damaged stickers must be replaced.

## 8.1. Maintenance overview

Activity \ Frequency	Initial maintenance / after 25 operating hours	Every 8 operating hours / daily	Every 150 operating hours / every six months	Every 150 operating hours / every year	Every 400 operating hours	See section
Change the engine oil	<b>X</b>		<b>X</b>	<b>X</b>		8.2.4
Check the valve play of the engine, adjust if necessary	<b>X</b>				<b>X</b>	Yanmar instructions
Re-tighten all accessible threaded connections	<b>X</b>					
Clean the air filter		<b>X</b>				8.2.1
Change the fuel filter				<b>X</b>		8.2.7
Change the engine oil filter			<b>X</b>	<b>X</b>		8.2.5
Check the oil level of the transmission			<b>X</b>	<b>X</b>		8.2.8
Change the oil in the exciter				<b>X</b>		8.2.9




The regulations and the operating and maintenance manuals of the engine manufacturer must be complied with in addition to the activities specified in the above maintenance overview.



YouTube playlist - service videos

## 8.2. Description of the maintenance operations

### 8.2.1. Clean the air filter

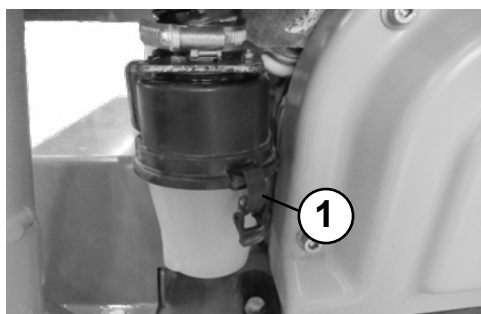


► Open the cyclone separator at the clip (1).

► Drain the collection container.

► Refit the collection container.

► Unscrew the air filter cover (2).

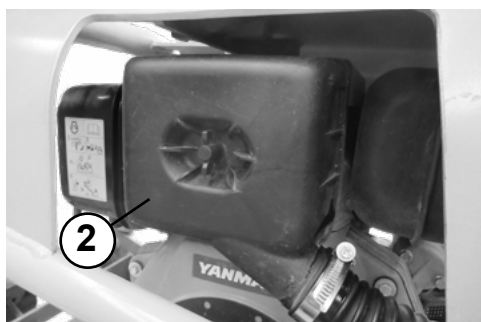


► Remove the wing nut on the air filter insert.

► Remove the air filter insert (3).

► Separate the non-woven material (4) from the air filter insert (5).

► Blow out the non-woven material and the air filter insert from the inside to the outside.

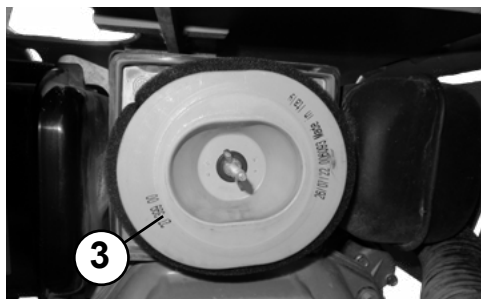

► Check for damage. Use a new air filter insert in case of damage or excessive clogging.


► Pull the non-woven material over the air filter insert.

► Tighten the air filter cartridge using the wing nut.

► Screw on the air filter cover.




### 8.2.2. Check V-belt

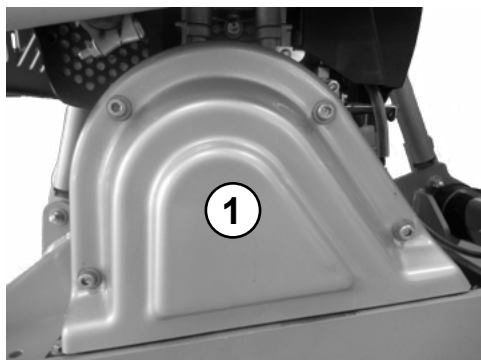

► Shut down the machine.

► Remove the V-belt guard (1).

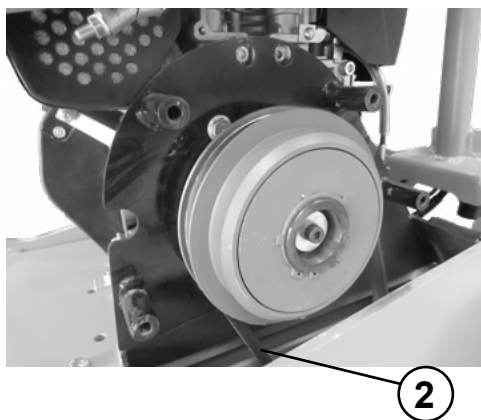



- ▶ Check the V-belt (2) for cracks and wear.
- ▶ Replace the V-belt if it shows signs of extensive wear or other damage.
- ▶ Fit the V-belt guard.

### **⚠ WARNING**

If lubricating oils and fuel come into contact with skin, they can cause skin cancer.

- ▶ Wear protective gloves.
- ▶ If skin contact has occurred, wash the affected areas thoroughly.

### **8.2.3. Check the engine oil level**

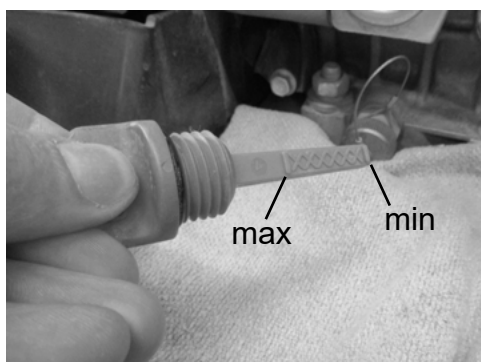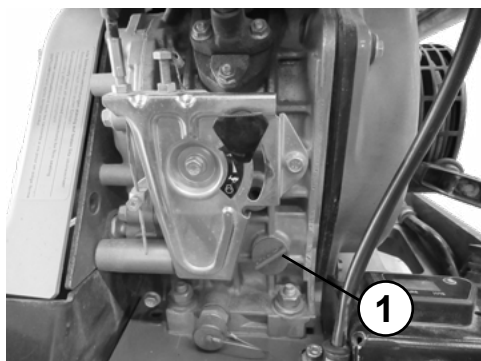

- ▶ Park the machine on a horizontal subsurface.
- ▶ Switch off the engine and wait for several minutes until the oil has collected in the crankcase.
- ▶ Unscrew the oil dip stick (1) from the crankcase.
- ▶ Wipe off the oil dip stick with a clean cloth.
- ▶ Place the oil dip stick on the thread, but do not screw it in.
- ▶ Pull the oil dip stick out of the crankcase.
- ▶ The correct oil level is between the “min.” and the “max.” marks.
- ▶ When the oil level reaches the “min.” mark, fill in fresh oil in accordance with the specification.




#### 8.2.4. Change the engine oil

##### **⚠ CAUTION**

Danger of burn injuries at the hot engine and its attachments.

- ▶ Allow the combustion engine to cool down sufficiently before starting work.
- ▶ Use extra caution during work on the engine when it is at operating temperature.

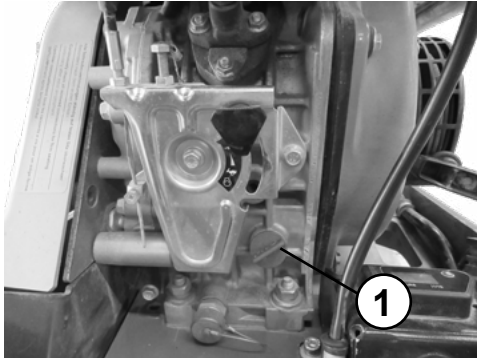

- ▶ Start the engine and allow the engine to warm up for a few minutes.

- ▶ Switch off the engine.

- ▶ Unscrew the oil dip stick (1). It also serves as the seal for the oil filler neck.

- ▶ Place a suitable collection vessel under the oil drain.

- ▶ Remove the cover cap (2) from the oil drain valve.

- ▶ Screw the oil drain hose (3) onto the oil drain valve.

**⚠ CAUTION!** Danger of scalding due to hot oil.  
Wear protective gloves.

- ▶ Use extra caution.

- ▶ Allow the oil to drain into the collection vessel.



- ▶ Unscrew the oil drain pipe.

- ▶ Attach the cover cap to the oil drain valve.


- ▶ Fill fresh oil into the engine in accordance with the specification.

- ▶ Check the oil level and top off to the “max.” mark.

- ▶ Screw in the oil dip stick.

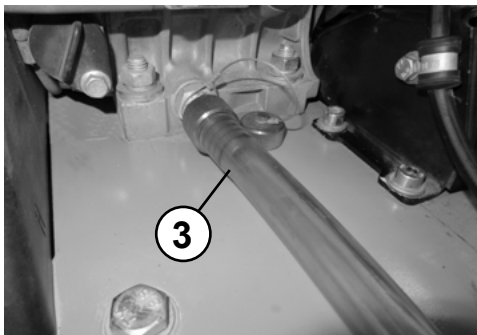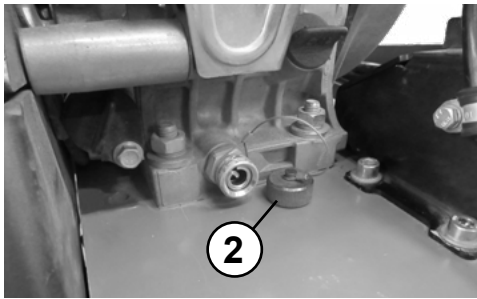

### 8.2.5. Change the engine oil filter

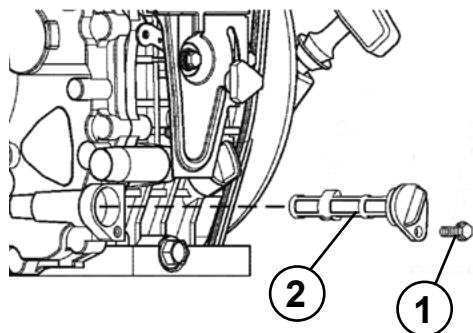


#### **CAUTION**

Danger of burn injuries at the hot engine and its attachments.

- ▶ Allow the combustion engine to cool down sufficiently before starting work.
- ▶ Use extra caution during work on the engine when it is at operating temperature.
- ▶ Drain the engine oil.
- ▶ Loosen the fastening screw of the oil filter (1).
- ▶ Pull the oil filter (2) out of the engine case.
- ▶ Insert a new oil filter.
- ▶ Screw in the fastening screw.
- ▶ Fill fresh oil into the engine in accordance with the specification.
- ▶ Start the engine and allow the engine to warm up for 5 minutes.
- ▶ Check for leaks.
- ▶ Switch off the engine and allow it to cool off for 10 minutes.
- ▶ Check the oil level. Top off if necessary.

### 8.2.6. Change the fuel filter

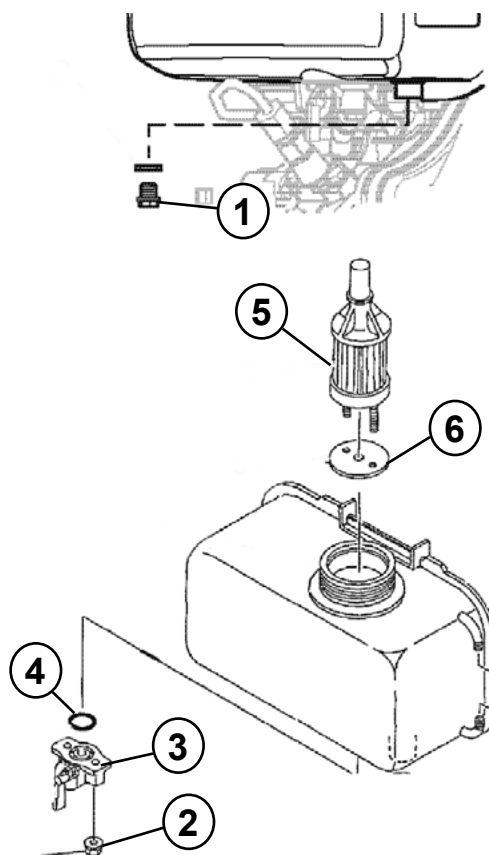


- ▶ Drain the fuel tank into a suitable clean vessel.
- ▶ Use the drain plug (1) to do so.
- ▶ Loosen the fastening screws (2) of the fuel cock (3).
- ▶ Remove the fuel cock.
- ▶ Replace the O-ring (4).
- ▶ Pull the fuel filter (5) and the seal (6) out of the tank.
- ▶ Insert a new fuel filter along with a new seal into the fuel tank.
- ▶ Install the fuel cock using the fastening screws.

### 8.2.7. Check the hydraulic oil level




- ▶ Lock the guide bar in place in the transport position.
- ▶ Check the hydraulic oil level.  
The oil level is correct when the oil is in the middle of the view glass.

### 8.2.8. Change the oil in the exciter

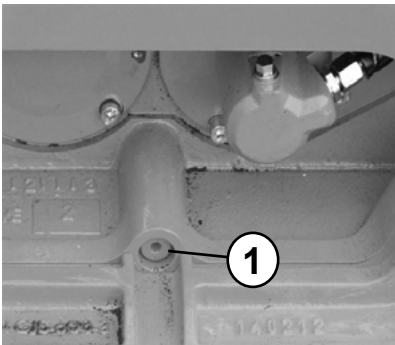

- ▶ Start the engine and allow the engine to warm up for a few minutes.
- ▶ Switch off the engine.
- ▶ Tilt the machine slightly.
- ▶ Place a suitable collection vessel under the machine.
- ▶ Loosen the oil drain plug (1).
- ▶ Allow the oil to drain.
- ▶ Tilt the machine in the other direction.
- ▶ Fill fresh oil into the exciter in accordance with the specification.
- ▶ Close the oil drain plug.

### 8.2.9. Use a permanent charger

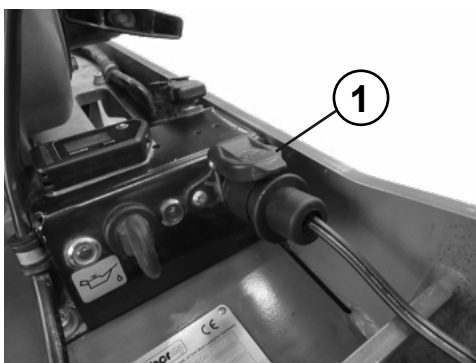

- ▶ Open the protective cover (1) of the charging socket.
- ▶ Connect the permanent charger to the charging socket.
- ▶ Connect the permanent charger to the appropriate mains supply.



Comply with the manufacturer's operating manual when using the permanent charger! The operating manual is included with every permanent charger.

### 8.3. Operating fluids and fill levels

Assembly	Operating material		Quantity CR 5 Y
	Summer	Winter	
<b>Engine</b> Engine oil	SAE 10 W 40 (-10 ~ + 50 °C) API CJ-4 or ACEA E6 or JASO DH-2		1.1 l
<b>Fuel tank</b>	<b>Diesel</b> EN 590 BS 2869 A1 / A2 ASTM D 975-09a 1-D S15 / 2-D S15 HVO DIN EN 15940		3.3 l
<b>Vibrator</b>	Fully-synthetic transmission fluid API GL-5/GL-4 First filling Fuchs Titan SINTOPOID LS SAE 75W-90		0.75 l
<b>Gearshift</b>	Gear oil in accordance with DEXRON III (H) First filling Fuchs Titan ATF 4000 or equivalent		As necessary









[facebook.com/WeberMT](https://facebook.com/WeberMT)



[youtube.com/MyWeberMT](https://youtube.com/MyWeberMT)



**Weber Maschinentechnik GmbH**

Im Boden 5-8, 10 · 57334 Bad Laasphe · Germany  
Phone +49 2754 398 0 · Fax +49 2754 398 101  
[info@webermt.de](mailto:info@webermt.de) · [www.webermt.de](http://www.webermt.de)

085101207-104 / CR 5 Y\_2025-04  
Original instructions!