

Operating and Maintenance Manual



SRE 590 DC

0170161

0170163

Note down the information given on the type plate so that you can recreate the rating plate should the plate be lost.



1 Description

.....

2 Type

.....

3 Serial no.

.....

4 Year of construction

.....

5 Weight

.....

6 Rated power kW

.....

Contents

1. Introduction.....4

2. Description.....5

3. Technical data.....6

4. Safety.....7

 4.1. Information and safety stickers 11

5. Operation.....12

6. Transport.....18

7. Storage19

8. Maintenance.....20

8.1. Maintenance overview21

8.2. Description of the maintenance operations.....22

 8.2.1. Change the oil in the tamping system..... 22

 8.2.2. Change the tamping foot..... 23

1. Introduction

This operating and maintenance manual is designed to help you become familiar with your tamper and enable you to maintain it and use it for its intended purpose.

The safety and maintenance instructions provided in this manual will help avoid hazards, reduce repair and downtime costs and increase the reliability and operational readiness of your tamper. Follow these instructions precisely.

This operating and maintenance manual must always be kept at the implementation site of the tamper and be available to the machine operator.


If you require any additional information, turn to your Weber MT dealer.

Found on the last page of this manual is a QR code.

Scan it to acquire the current contact addresses of the Weber MT branches.

You can obtain information on the assembled Honda battery-powered engine and find a spare parts list for it at **www.honda-engines-eu.com**.

For the latest spare parts list of the machine, open the Weber MT service app or visit the following link:

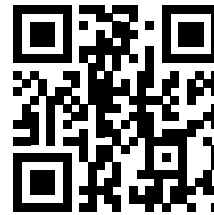

<https://wenet.webermt.com/>

2. Description

The machine is a hand-guided vibrating tamper.

A battery-powered Honda engine makes the tamping system vibrate via a centrifugal clutch.

The engine speed can be set to three different levels via a lever.

The manual guidance rod houses the battery and the necessary controls.

3. Technical data

	SRE 590 DC
Weight	
Operating weight CECE (in kg)	68
Dimensions	
Overall length (in mm)	740
Overall width (in mm)	350
Height (in mm)	1105
Tamping foot width (in mm)	280
Impact rate (/min)	670
Stroke (in mm)	61.6
Drive	
Engine manufacturer	Honda
Type	GXE 2.0
Performance at operating speed in accordance with ISO 3046-1 (kW)	1.8
Operating speed (m/min)	3600 / 3300 / 3000

	SRE 590 DC
Noise emissions in accordance with 2000/14/EC	
Sound pressure level L_{PA} ascertained in accordance with EN 500, in dB (A)	98
Sound power level L_{WA} ascertained in accordance with EN ISO 3744 and EN 500, in dB (A)	108
Vibration values	
Root-mean-square acceleration value for hand-arm vibration ascertained in accordance with EN 500 in m/s^2	12,8
In accordance with directive 2006/42/EC, complying with the vibration values is the owner's responsibility.	

4. Safety

General

All safety instructions must be read and complied with, as non-compliance will result in

- Danger to life and limb of the user,
- Impairments to the machine or other property.

In addition to the operating manual, the accident-prevention regulations in the country where the appliance is used must be complied with.

Intended use

The machine should only be used in technically faultless condition, as intended, in a safety-conscious and hazard-conscious manner, and in compliance with the instructions in the operating manual.

Malfunctions that impair safety must be eliminated without delay.

The machine is designed exclusively for compacting:

- Sand,
- Gravel,
- Crushed rock,
- Semi-cohesive mixed material.

The operator's work position is behind the machine. The operator must guide the machine safely with both hands on the handle.

Non-intended use

Unless used as intended, the machine involves a risk of personal injury and property damage. The machine is expressly not suitable for:

- Use as a ladder or step,
- Use as a tool for driving stakes into the ground,
- Operation in an explosive atmosphere.

The responsibility for any damage arising from non-intended use falls on the owner / operator rather than the manufacturer. Damage that can be attributed to non-intended use of the machine will void any warranty claims.

Residual risk

There is always an increased risk of accidents in the immediate danger area around the machine if the operator fails to notice persons in the vicinity of the machine. Make anyone close to the machine aware of this risk. The operator must not put the machine into operation unless everyone in the vicinity of the machine is aware of this risk.

Requirements on the operator	<p>This soil compactor may only be operated by suitable operators who are of legal age. They must be instructed on how to operate the machine by the owner or by the owner's assigned personnel. The operator must comply with traffic regulations.</p> <p>Maintenance and repairs require specific qualifications. These operations may only be carried out by trained professionals. The machine must not be operated by children.</p>
Personal protective equipment	<p>Personal protective equipment must be worn during operation and while performing maintenance on the machine. It consists of:</p> <ul style="list-style-type: none"> - protective goggles, - hearing protection, - work shoes or boots with toe guard.
Danger areas	<p>The immediate danger area is the direct perimeter around the machine. This area is off-limits to third parties.</p>
Spare parts, changes and conversions	<p>Changes and conversions are prohibited unless made with original Weber MT spare parts. If the machine is modified with other accessories without the approval of Weber MT, the manufacturer will not assume liability for any resulting personal injury or property damage.</p> <p>All maintenance and repairs must be carried out with original Weber MT spare parts. Untested spare parts may affect the reliability and safety of the machine.</p>
Before starting the machine	<p>There is danger of material damage if the machine is started before necessary maintenance or repairs have been completed. Make sure every time before starting the machine that all work on the machine has been completed.</p> <p>To avoid injuries, the machine must not be started unless the operator wears the required personal protective equipment.</p> <p>Objects placed on top of the machine may fall or be flung off during operation or when the machine is started. Therefore, remove all loose objects or tools before starting the machine.</p>
During operation	<p>There is a crushing hazard under the tamping foot during operation.</p> <p>The personal protective equipment will protect the toes, but not the entire foot. Do not step under the tamping foot.</p> <p>Monitor the surroundings to avoid injury to third parties or material damage.</p>

Suspend operation and shut down the machine if detecting damage on the machine during operation.

Parking the machine

Always park the machine on a level subsurface with sufficient bearing capacity.

Parked machines presenting an obstacle must be secured in accordance with statutory regulations, particularly in the area of public traffic surfaces.

Cleaning work

Use clear water for cleaning. Do not use flammable solvents. The vapors of the solvents may ignite upon contact with hot components or other sparks.

Perform cleaning tasks only in rooms that are suitable and have been approved for that purpose. Residual oil and lubricants that may have been rinsed off have a negative impact on the environment and must be collected by suitable means (e.g. oil separator).

Remove the battery prior to cleaning.





The engine and the control unit must not be cleaned with a high-pressure cleaner.

Inspection

The machine must be inspected in accordance with the corresponding implementation conditions and operating conditions to ensure its operationally safe status. This inspection should be performed as needed by an expert - however, no less than once a year. The findings of the inspection must be stored in writing until the time of the next inspection.

Safety instructions and warnings


A variety of safety instructions and warnings are used throughout this operating manual. The following explains the meaning of signal words and symbols.

 ATTENTION	ATTENTION warns of the danger of material damage.
 CAUTION	CAUTION warns of the danger of slight injury.
 WARNING	WARNING warns of a danger that may lead to death or serious injury.
 DANGER	DANGER warns of a danger that will lead to death or serious injury unless avoided.



The information symbol provides supplemental information on the operation of the machine and points to complementary technical information.

4.1. Information and safety stickers


	Sticker	Meaning
1		<p>The sound power level is 108 dB (A). Therefore, wear suitable hearing protection at all times.</p>

5. Operation

Preparing the machine for initial use


- ▶ Remove all packaging material.
- ▶ Check all components for visible damage. Do not start the machine if detecting visible damage. Contact the responsible dealer.
- ▶ Check if the shipment of the machine and its components is complete.
- ▶ Check the fill level of the operating fluids and top off if necessary.
- ▶ Set up the machine at its place of use.

Operating positions on the machine

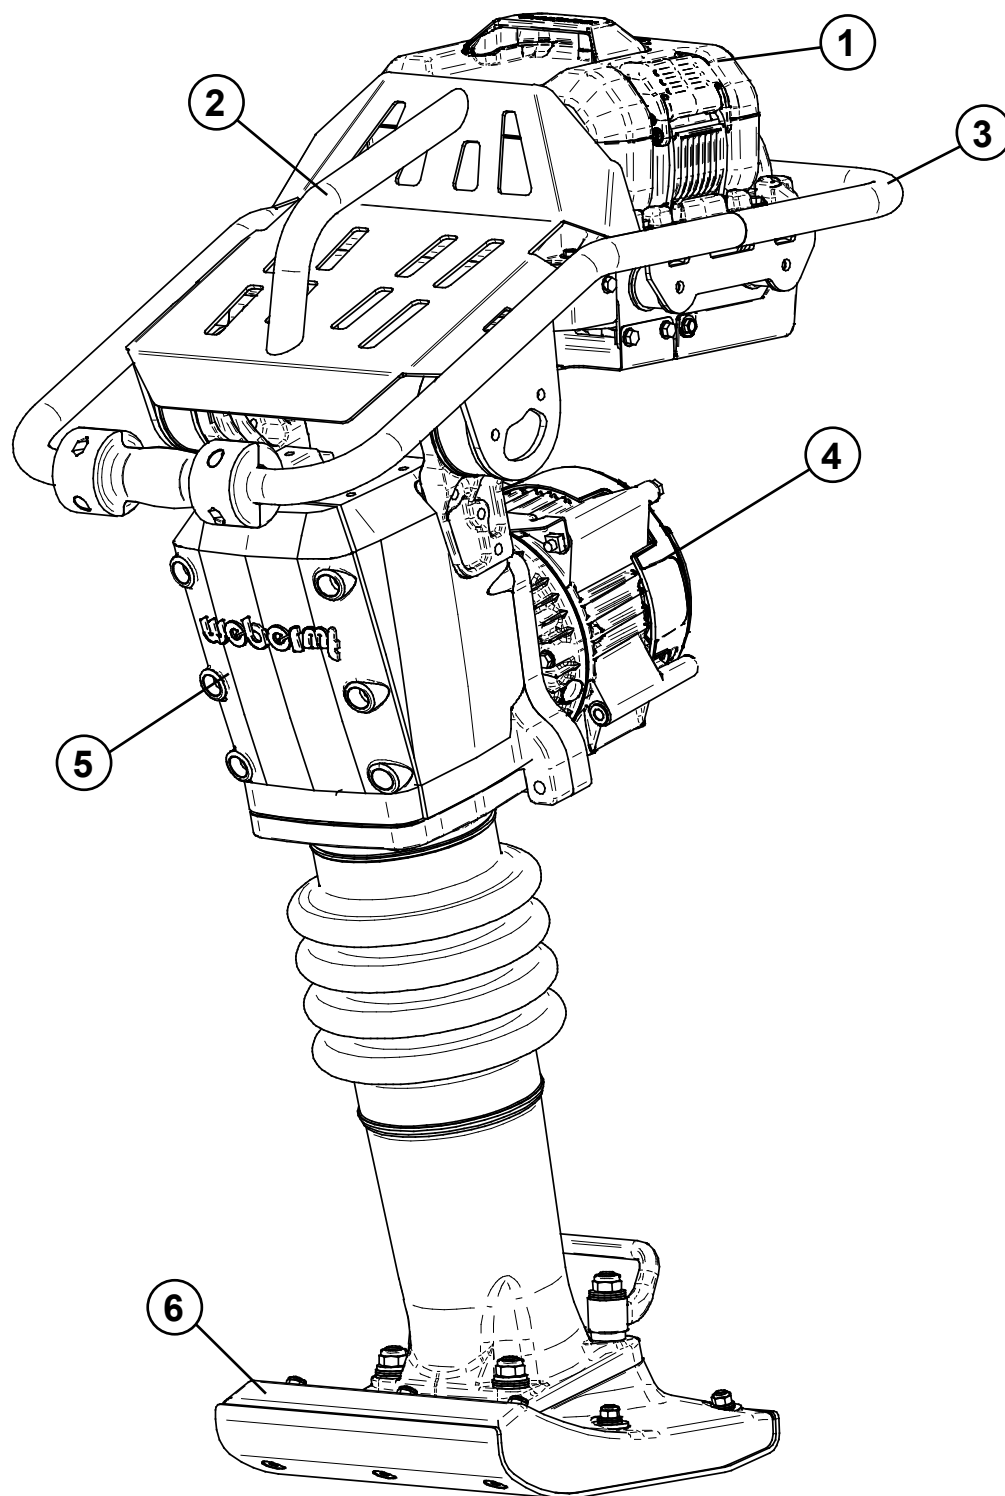

Overall view SRE 590 DC

- | | | | |
|---|---------------------|---|----------------|
| 1 | Battery pack | 4 | Engine |
| 2 | Crane bracket | 5 | Tamping system |
| 3 | Manual guidance rod | 6 | Tamping foot |

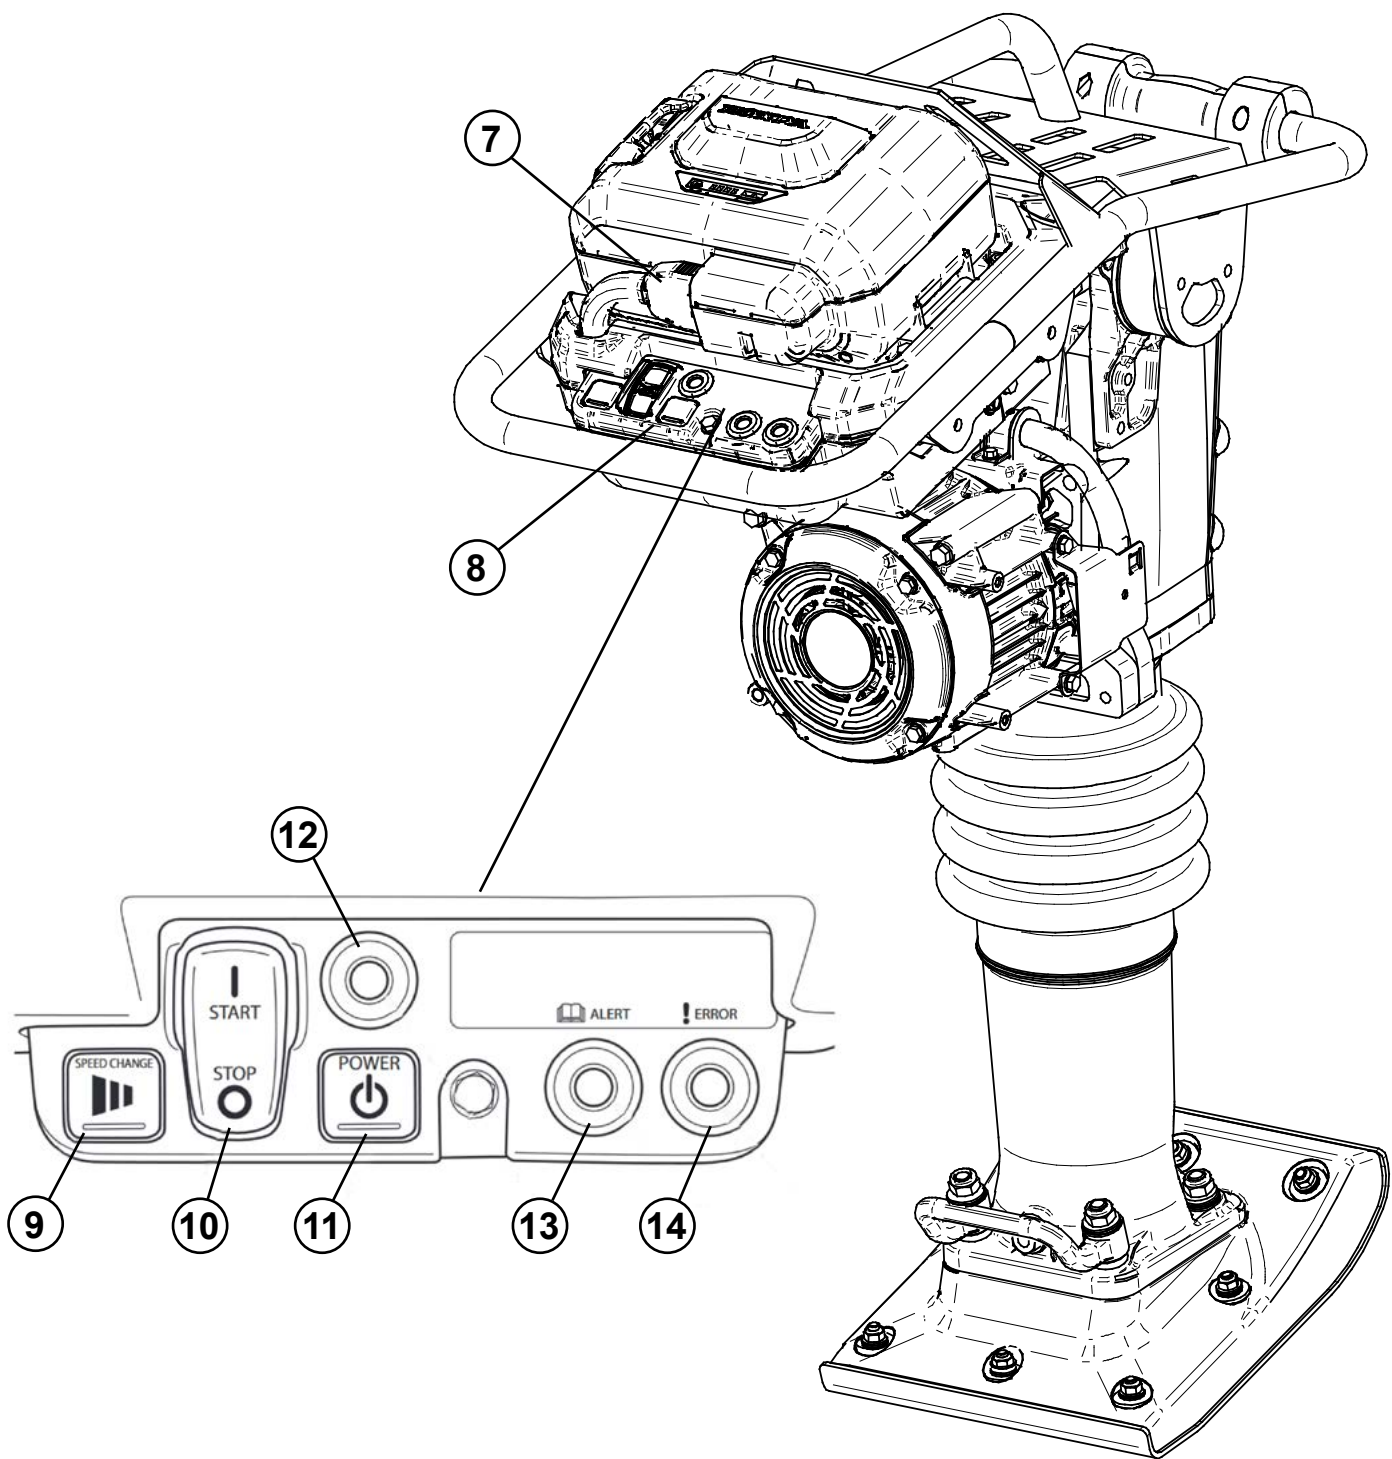

7 Power cable
8 Switch box

9 Speed Change switch
10 START/STOP switch
11 POWER switch

12 POWER indicator
13 ALERT indicator
14 ERROR indicator

Before starting work

Perform the following tasks before starting to work in order to prevent failures or excessive wear.

Visual inspections

- ▶ Entire machine for external damage.
- ▶ Rubber buffers for crack formation.

Other inspections

- ▶ Compliance with the maintenance schedule
- ▶ Threaded unions for firm seat

Working with the machine

Starting the engine

► Press the POWER switch.

✓ After all indicators light up for a few seconds, only the POWER indicator remains illuminated.

✓ The engine is ready for operation.



If the POWER switch is pressed with the START/STOP switch in the START position, the POWER indicator will not light up, and the ALERT indicator will flash. The engine cannot be started. In that case, move the START/STOP switch to the STOP position first.

If not used for approx. one minute after a press of the POWER switch, the engine will switch off again. The POWER indicator goes out.

Compacting

WARNING

There is a crushing hazard under the tamping foot from the movement of the tamper during compacting.

► Wear the personal protective equipment.

► Only guide the tamper in the grip area of the manual guidance rod.

CAUTION

There is a crushing hazard between the tamper and the wall during work in close proximity to walls.

► Use extra caution when working close to obstacles

CAUTION

If guided incorrectly, the tamper may tip over during operation. There is a crushing hazard.

► Guide the tamper safely with both hands in the grip area of the manual guidance rod.

► Start the engine.

► Set the desired speed at the Speed Change switch.

► Guide the tamper with both hands on the manual guidance rod.

Switching off the engine

- ▶ Set the START/STOP switch to the STOP position.
- ✓ The engine stops, and the POWER indicator goes out.




You can also switch the engine off by pressing the POWER switch. However, it may take a while before it stops.

Installing the battery pack




- ▶ Make sure there is no dirt on the battery holder.


- ▶ Tip the battery back and insert the claw into the battery hook.

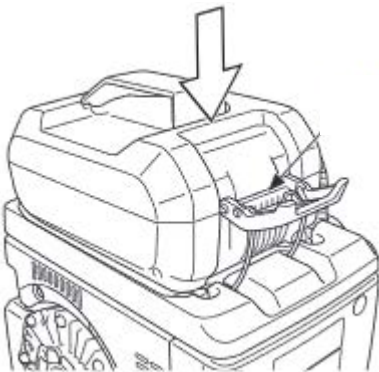

- ▶ Push the battery pack down and hook in the battery fastener.

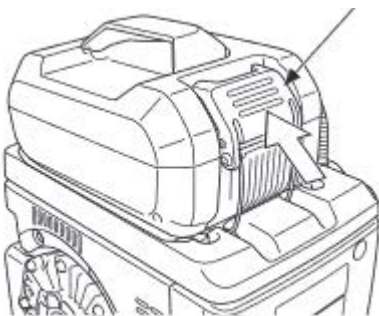

- ▶ Push up the battery fastening lever and lock the battery pack in place.

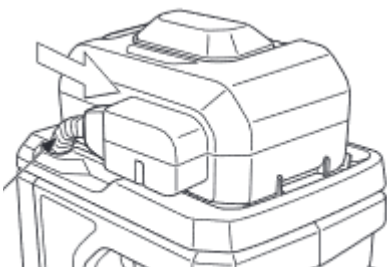

- ▶ Remove the protective cap from the battery connector and insert the power cable.

6. Transport

Transport of the machine requires that the battery pack be disconnected from the machine.

Lifting the machine

The machine can be lifted for loading onto a vehicle.

CAUTION

Risk of material damage and injuries. The use of defective or unsuitable lifting gear may cause the machine to fall down.

- ▶ Use slings that possess the appropriate carrying capacity.
- ▶ Fit the crane hook into the lifting ring and lift the machine up straight.

Transporting the battery pack on a vehicle

Transporting the battery pack on a vehicle requires that the battery pack be stored on a level surface. The battery pack must be secured such that it cannot move. Any regulations prescribing methods of transportation, such as requirements stipulating storage in a specific storage compartment, must be observed.

In addition, the following measures must be taken as well:

- ▶ Remove the battery pack from the machine and protect it with cushioning material.
- ▶ Make sure the inlet and outlet openings are pointing down when loading and securing the battery pack to keep rain water from entering the interior.
- ▶ Do not throw the battery pack.
- ▶ Avoid direct sunlight and refrain from transporting the battery pack in a location that may become very hot (e.g. a closed vehicle).
- ▶ Do not stack battery packs.
- ▶ Do not place luggage on top of the battery pack. Make sure that other pieces of luggage cannot slide and collide with the battery pack.

Transporting the battery pack on ships or planes

Shipment by third parties (e.g. by air freight or carriers) mandates that you follow specific requirements regarding packaging and labeling. Consult an expert in hazardous materials when preparing the item to be shipped for transport. Ship only battery packs that are undamaged. Also observe any and all national regulations.

7. Storage

Storage at the construction site

If stored at the construction site, e.g. over night, the machine must be secured against theft and unauthorized use.

Parked machines presenting an obstacle must be secured in accordance with statutory regulations, particularly in the area of public traffic surfaces.

Store the battery pack separately from the machine. Avoid direct sunlight and refrain from storing the battery pack in a location that may become very hot (e.g. a closed vehicle).

Storage for an extended period

If the machine will not be used for a period longer than one month, the following measures must be taken:

- ▶ Clean the entire machine thoroughly.
- ▶ Check the tamping system for leaks. Correct any detected defects.
- ▶ Observe the information provided on long-term storage in the operating instructions of the battery pack.



If the machine is to be stored for longer than six months, contact the Weber MT's service organization to discuss additional measures.

8. Maintenance

General information

The section below contains instructions that need to be observed for regular maintenance. Read these instructions carefully and follow them in order to prevent downtimes of the machine caused by excessive wear or damage to the machine. Also read the safety instructions relevant to machine maintenance before you begin with the maintenance work. They help minimize the risk to maintenance personnel.

Maintenance personnel

Maintenance and repairs require specific qualifications. These operations may only be carried out by trained professionals. Maintenance personnel must be instructed on how to operate the machine by the owner or by the owner's assigned personnel.

Maintenance personnel are required to wear the personal protective equipment during work (see section "Safety").

Safety

There is an increased risk of injury during maintenance and repairs, e.g. crushing at moving parts.

Following the conclusion of all maintenance and repairs, all protective fixtures must be refitted and placed back into operation.

Discharged operating fluids have a negative impact on the environment. They must be collected and stored in suitable containers. Disposal in accordance with environmental protection regulations.

All maintenance work may only be carried out when the engine is switched off. Safeguard the engine against unauthorized start attempts. To do so, remove the battery pack.

Before starting the machine after maintenance operations, make sure that all loose parts (screws, tool, etc.) have been removed from the machine. They can be drawn in or flung off by moving parts.

Keep the entire machine clean. The stickers must always be clearly legible. Damaged stickers must be replaced.

8.1. Maintenance overview

Activity	Frequency		See section
	Initial maintenance / after 10 operating hours	Every 150 operating hours / every year	
Check for visible damage	X		
Re-tighten all accessible threaded connections	X		
Change the oil in the tamping system		X	8.2.7




The regulations and the operating and maintenance manuals of the engine manufacturer must be complied with in addition to the activities specified in the above maintenance overview.



YouTube playlist - service videos

8.2. Description of the maintenance operations

8.2.1. Change the oil in the tamping system

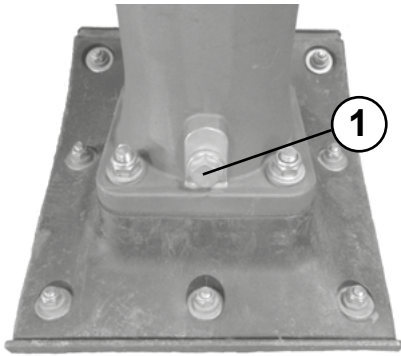


- ▶ Place a suitable collection vessel under the oil drain.
- ▶ Unscrew the screw plug (1) from the fill opening.
- ▶ Tilt the machine backward and let the waste oil drain into the vessel.
- ▶ Tilt the tamper forward and set it down on the protective frame.
- ▶ Fill in new oil in accordance with the specification.
- ▶ Clean the screw plug and screw it in.
- ▶ Dispose of the collected oil in an environmentally responsible manner.




<p>Oil specification of tamping system: Hydraulic oil HVLDP 68 Fill quantity: 1.0 l.</p>
--


8.2.2. Change the tamping foot

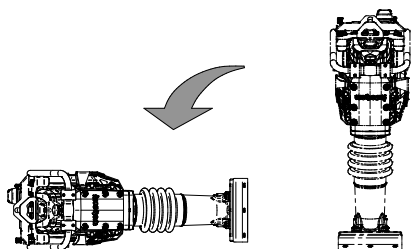


- Lay the tamper down on its side.

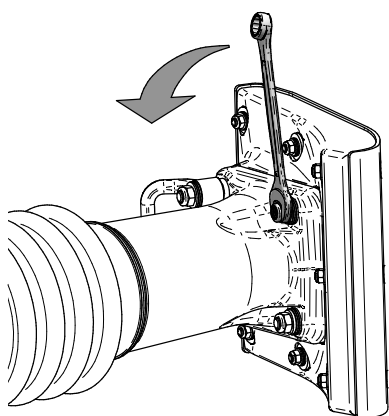


- Loosen the four nuts of the tamping foot.

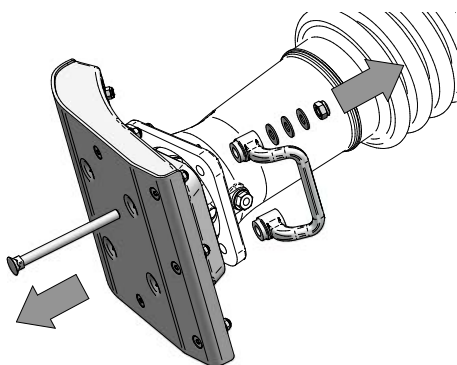

- Remove the tamping foot, the fasteners and the handle.

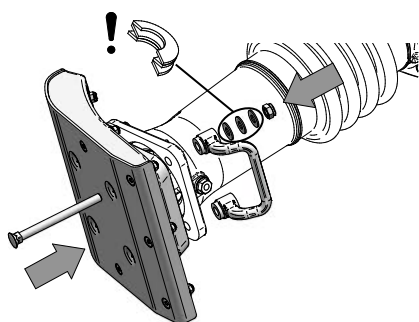

- Install a new tamping foot. Fasten the handle when doing so.
- Observe the mounting arrangement of the plate springs!

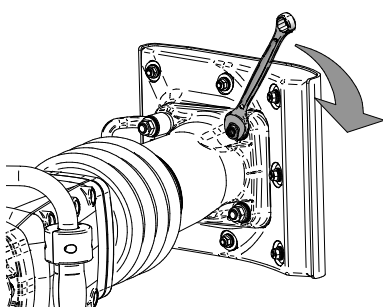

- Tighten the four nuts.
The tightening torque is 35 Nm.



facebook.com/WeberMT



youtube.com/MyWeberMT



Weber Maschinentechnik GmbH

Im Boden 5-8, 10 · 57334 Bad Laasphe · Germany
Phone +49 2754 398 0 · Fax +49 2754 398 101
info@webermt.de · www.webermt.de

085102454-104 / SRE 590 DC_2025-04
Original instructions